

Baofeng UV-82 Manual Programming

Set for a 2-meter repeater with a 100.0 Hz tone

Set the repeater offset (*OFFSET : 00.600*)

MENU 26

MENU 00600

MENU

EXIT/AB

Set the repeater offset (shift) direction (*SFT-D : -*)

MENU 25

MENU -

MENU

EXIT/AB

Set the repeater tone (*T-CTCS : 100.0HZ*)

MENU 13

MENU 1000

MENU

EXIT/AB

Store the settings in memory channel 17

First delete the memory channel contents (*DEL-CH : 017*)

MENU 28

MENU 017

MENU

EXIT/AB

Store the radio receive (*MEM-CH : 017*) “receiving memory”

MENU 27

MENU 017

MENU

EXIT/AB

Store the transmit (*MEM-CH : 017*) “transmitting memory”

MENU

MENU

MENU

EXIT/AB
