

Yaesu FT-60R Manual Programming

Set for a repeater with a 100.0 Hz tone

Set the squelch type (*SQL.TYP* : TONE)

F/W 1

F/W

Set the repeater tone (*TN FRQ* : 100.0HZ)

F/W 2

F/W

Store the frequency and settings, press and hold
Turn the selector knob to 17

F/W

Momentarily press

F/W

Force the radio to simplex (*RPT* : RPT.OFF)

F/W 4

F/W

Set the channel name (*NM WRT*)

- 1. Change to Memory Mode (V/M) if not already there**
- 2. F/W Ø - rotate to NM WRT (28) - F/W - F/W**
- 3. Turn the knob for each character - F/W after each**
- 4. Press and hold F/W**
- 5. Press PTT when finished**